



# Phonecell® SX5e

## Fixed Cellular Terminal



- GPRS Packet Data
- Circuit Switched Data
- Short Message Service (SMS)
- Optional Group 3 Analog Fax
- Circuit Switched Computer Fax

- 
- ✓ Access the Internet and E-Mail
  - ✓ Automatic end-of-dialing (no SEND key)
  - ✓ Caller ID, call waiting/call hold, call forwarding
  - ✓ Easy set up
  - ✓ 7 LEDs for signal strength, message alert and terminal status

**Reduce costs without  
reducing phone services  
with this easy to install  
wireless terminal**

---

### Models

- Dual Band 900/1800 GSM  
Phase 2+
- Dual Band 850/1900 GSM  
Phase 2+

[www.gsmsave.co.uk](http://www.gsmsave.co.uk)  
0800 298 8010

# Phonecell® SX5e Fixed Cellular Terminal




## Features

- GPRS packet data, multi-slot Class 10 (up to 72 kbps)\*
- Circuit switched digital computer fax and data (up to 14.4 kbps)\*
- Short Message Service (SMS)\*
- Group 3 analog fax (optional)\*
- Compatible with popular supplementary services including caller ID, call waiting/call hold, call forwarding, call barring, multi-party calling\*
- Single jack or dual jack for voice and fax operation
- DTMF and pulse-dialing
- Supports up to five phones (5 REN)
- Emergency battery backup
- Standard GSM Mini-SIM (Subscriber Identification Module) 3 volt and 5 volt compatible
- Supports GSM personalization features (GSM 02.22)

\* Subject to network availability.

## Connectivity Options

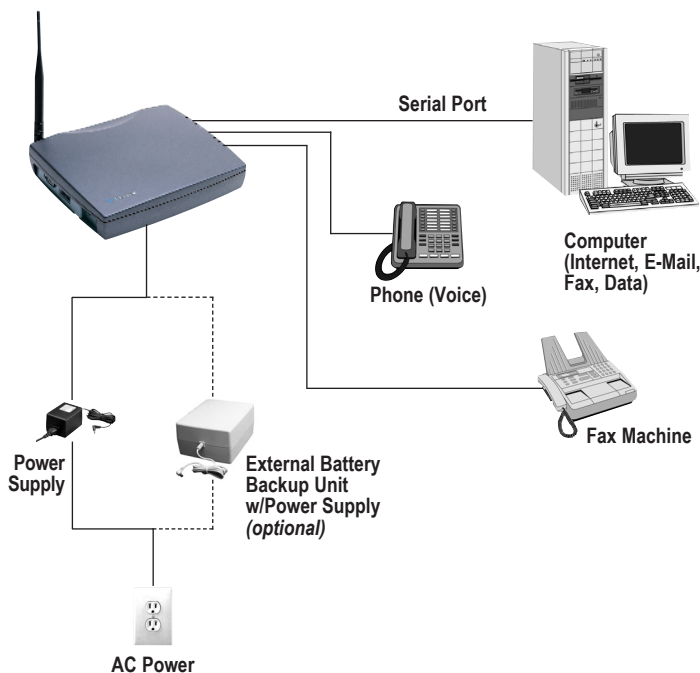

## Specifications

### Air Interface Standard

- GSM 900/1800 Phase 2+
- GSM 850/1900 TIA/EIA J-STD-007

### Transmit Power

- GSM 850 & 900: 2 watts
- GSM 1800 & 1900: 1 watt

### Frequency Ranges

	<u>Transmit</u>	<u>Receive</u>
• GSM 850	824-849 MHz	869-894 MHz
• GSM 900	890-915 MHz	935-960 MHz
• GSM 1800	1710-1785 MHz	1805-1880 MHz
• GSM 1900	1850-1910 MHz	1930-1990 MHz

### FWT Dimensions and Weight

- Metric (cm) 18.3 x 5.1 x 21.1
- U.S. (inches) 7.2 x 2.0 x 8.3
- 0.73 kg. (1.6 lb.)

### Environment

- Operating temperature range: -10°C to +50°C
- Storage temperature range: -40°C to +60°C
- Humidity: 5% to 95%

### Intelligent RJ-11 Interface

- Ringer equivalence number (REN) 5.0A
- Dynamic echo cancellation
- PSTN Emulation

### LED Indicators

- Power/Battery status
- Signal status
- Message status (SMS, voice mail)
- ON/OFF hook status

### Connectors

- RJ-11 interface jack for telephone
- RJ-11 interface jack for Group 3 analog fax (model dependent)
- DB-9 port for GPRS or circuit switched digital PC fax/data
- TNC antenna connector (50 ohms)
- DC power input jack

### Antenna

- Dipole antenna (*included*)
  - GSM 900/1800: 2 dBi dual band
  - GSM 850/1900: 2 dBi dual band
- Optional higher gain antennas available

### AC-to-DC Switching Power Supply (Included)

- Voltage: 90 - 300 VAC
- Frequency: 50/60 Hz
- Plug options: U.S., U.K., Euro., Australia

### Emergency Battery Backup

- 4 "AA" alkaline batteries provide up to 1 hour of air time. (*Batteries not included.*)

### External Battery Backup (Optional)

- External battery backup unit/charger (*provides up to 8 hours of air time or 14 hours of standby*)

Available in the UK from [www.gsmsave.co.uk](http://www.gsmsave.co.uk) 0800 298 8010

GSM Save, B9 Seedbed Centre, Davidson Way, Romford, Essex, RM7 0AZ

Telular Corporation • Corporate Headquarters • 647 North Lakeview Parkway • Vernon Hills, Illinois 60061 USA  
Phone: 847-247-9400 • Fax: 847-247-0021 • E-mail: [sales@telular.com](mailto:sales@telular.com) • <http://www.telular.com>  
Europe/Middle East/Africa • Phone: +44-1753-486-500 • [uk@telular.com](mailto:uk@telular.com)  
Latin America • Phone: +1-954-217-0522 • [miami@telular.com](mailto:miami@telular.com)  
Asia/Pacific • Phone: +65-735-7728 • [singapore@telular.com](mailto:singapore@telular.com)